

# DuraVision™ DV1508T

## 15" Panel Mount Touch Monitor




This 15" high quality display with Touch Screen is designed for industrial applications. The panel mount monitor full fills industrial requirements like temperature resistance and resistance against electromagnetic radiation. The IP65 protection of the front meets an additional requirement for industrial applications. The integrated touch panel is on one hand the protection for the TFT panel and on the other side it allows the control without keypad and mouse.

- Panel mount monitor with 15.0" active color TFT-LCD
- Native resolution 1024 x 768 pixel (XGA)
- DVI-I (TMDS) with additional RGB analog VGA input with interpolation between 640 x 480 and 1280 x 1024 Pixel
- Automatic signal identification (Synchronization)
- High contrast (550:1) and brightness (250 cd/m<sup>2</sup>)
- Comfortable OSD operation
- Easy integration through compact construction

<b>Input signal analog:</b> Level (Video) Synchronization H-Frequency V-Frequency Pixel frequency Color Resolution Interface	0.7 V <sub>SS</sub> RGB (at 75 Ω) Sep.- / Composite-Sync. / Sync on green 30 – 100 kHz 50 – 100 Hz max. 110 MHz max. 16.7 million. max. 1280 x 1024 pixels 15 pin HD-D-Sub connector	<b>Display module</b> Type Screen Size W x H) Resolution / Pitch Color Brightness Backlight / MTBF	15.0" active color TFT-LCD 304,1 x 228,1 mm <sup>2</sup> 1024 x 768 / 0.297 mm 16.2 million 250 cd/m <sup>2</sup> 2 x CCFT / 50,000 hrs.
	<b>Input signal digital</b> Type Pixel frequency		DVI (TMDS) max. 140 MHz
		<b>Environment</b> Operating temperature Storage temperature Humidity	0 to +40°C -25 to +60°C max. 95 %; Ta = 40°C; no condensation
		<b>Special</b>	Touch Screen via USB or RS232
		<b>Certification</b>	CE (Class A)

### Dimensions (mm):

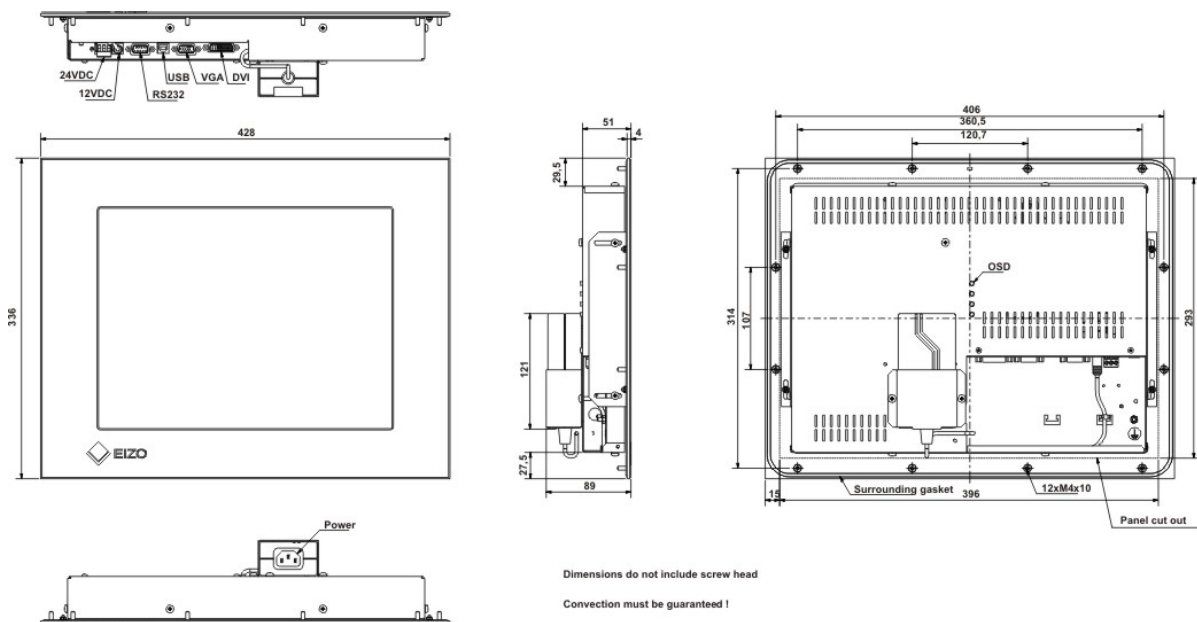

Avnet Technology Solutions: Deutschland ♦ +49 (0)2153 733-400 ♦ www.eizo.de Österreich ♦ +43 (0)1-61488-0 ♦ www.eizo.at